







### **Model Number**

#### OBE12M-R100-S2EP-IO-V31

Thru-beam sensor with 4-pin, M8 x 1 connector

### **Features**

- Miniature design with versatile mounting options
- IO-link interface for service and process data
- Various frequencies for avoiding mutual interference (cross-talk immunity)
- Extended temperature range -40°C ... 60°C
- · High degree of protection IP69K

### **Product information**


The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design — from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.


### **Dimensions**

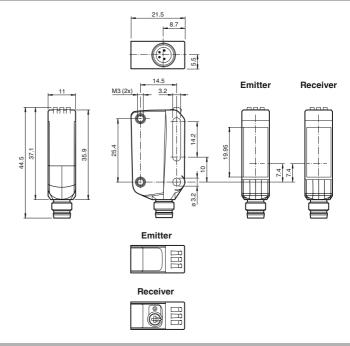

### **Electrical connection emitter**

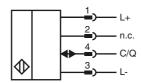

### **Electrical connection receiver**

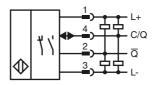

#### **Pinout**

Wire colors in accordance with EN 60947-5-2



- 1	BN	(brown
!	WH	(white)
.	BU	(blue)
.	BK	(black)


www.pepperl-fuchs.com

## Indicators/operating means

#### **Emitter**



#### Receiver

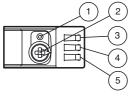

- Operating indicator
- Light-on/Dark-on changeover switch
- 2 Sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- Operating indicator / light on

### **Accessories**

#### IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

#### OMH-R10X-01

Mounting bracket

### OMH-R10X-02

Mounting bracket

#### OMH-R10X-04

Mounting bracket

# OMH-R10X-10

Mounting bracket

#### OMH-ML100-03

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

#### OMH-ML100-031

Mounting aid for round steel ø 10 ... 14 mm or sheet 1 mm ... 5 mm

#### V31-GM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

#### V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com


FPEPPERL+FUCHS


Technical data		
System components		
Emitter		OBE12M-R100-S-IO-V31
Receiver		OBE12M-R100-2EP-IO-V31
General specifications		
Effective detection range		0 12 m
Threshold detection range Light source		15 m LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Diameter of the light spot		approx. 65 mm at a distance of 1 m
Angle of divergence		3.7 °
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related param	ieters	400
MTTF <sub>d</sub> Mission Time (T <sub>M</sub> )		462 a 20 a
Diagnostic Coverage (DC)		0%
Indicators/operating means		<i>V</i> / <i>v</i>
Operation indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode
Function indicator		Yellow LED: Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - operating reserve not reached
Control elements		Receiver: light/dark switch
Control elements		Receiver: sensitivity adjustment
Parameterization indicator		IO link communication: green LED goes out briefly (1 Hz)
Electrical specifications		40 00 1/20
Operating voltage Ripple	U <sub>B</sub>	10 30 V DC max. 10 %
No-load supply current	I <sub>0</sub>	Emitter: ≤ 14 mA Receiver: ≤ 13 mA at 24 V supply voltage
Protection class		III
Interface		
Interface type		IO-Link ( via C/Q = pin 4 )
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1 2.3 ms
Min. cycle time Process data witdh		Emitter: Process data output: 2 Bit Receiver: Process data input: 2 Bit Process data output: 2 Bit
SIO mode support		yes
Device ID		Emitter: 0x110401 (1115137) Receiver: 0x110301 (1114881)
Compatible master port type		A
Input		and the same of a section of the sec
Test input		emitter deactivation at +U <sub>B</sub>
Output Switching type		The switching type of the sensor is adjustable. The default set
Gilloming type		ting is:  C/Q - Pin4: NPN normally open / dark-on, PNP normally close light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open dark-on
Signal output		2 push-pull (4 in 1)outputs, short-circuit protected, reverse pol rity protected, overvoltage protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category	11	DC-12 and DC-13
Voltage drop Switching frequency	U <sub>d</sub>	≤ 1.5 V DC 1000 Hz
Response time		0.5 ms
Ambient conditions		
Ambient temperature		-40 60 °C (-40 140 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		11 mm
Housing height		36 mm
Housing depth  Degree of protection		21.5 mm IP67 / IP69 / IP69K
Connection		M8 x 1 connector, 4-pin
Material		
Housing		PC (Polycarbonate)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"


	Optical face	PMMA
	Mass	Emitter: approx. 10 g receiver: approx. 10 g
	Compliance with standards and directives	
	Directive conformity	
	EMC Directive 2004/108/EC	EN 60947-5-2:2007+A1:2012
	Standard conformity	
	Product standard	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
	Standards	UL 60947-5-2: 2014 IEC 61131-9:2013 EN 62471:2008 EN 61131-9:2013
	Approvals and certificates	
	UL approval	E87056, cULus Listed, class 2 power supply, type rating 1

## **Curves/Diagrams**

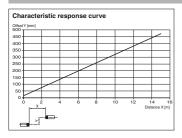

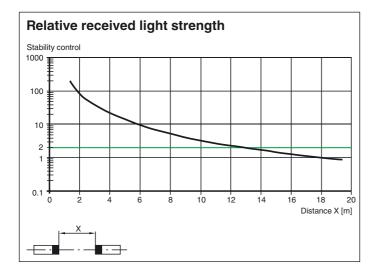

## **Functions and Operation**

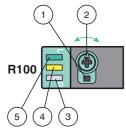

- 1 Light-on / dark-on changeover switch
- 2 Sensing range / sensitivity adjuster
- 3 Operating indicator / dark on
- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

# **Sensing Range / Sensitivity**

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

## **Light-on / Dark-on Configuration**

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

PEPPERL+FUCHS

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

### **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range / sensitivity adjuster for more than 180 degrees.